



Fitting Guidelines.

To be left with the customer after installation.

TAVISTOCK SUITE

Index.

Front cover.

Fitting guidelines. Pages 1 to 15.

Front cover.

FITTING GUIDELINES FOR: TAVISTOCK SUITE

(These guidelines consist of 15 pages).

Important: Safety and Technical.

- Please read all these guidelines and diagrams before commencing any installation.
- This fireplace / Inglebeam **should be** installed by an experienced, suitably qualified, and competent fireplace fitter.
- The fireplace / Inglebeam installation is **not** recommended as a DIY or single person installation.
- The fireplace / Inglebeam installation **must be** in accordance with Current National laws, Building Regulations, and any Rules in Force.
Current Document J outlines various British Standards that cover all aspects of fireplace installation for England and Wales.
The latest revision of BS 1251: 2015 refers to; Open fireplace components.
The fixing of stonework is covered by BS 8298 “Code of practice for Design and Installation of Natural Stone Cladding and Lining.
For stone and marble fireplaces refer to the Stone Federation of Great Britain, guidance on fire surrounds. (www.stonefed.org.uk)
- This fireplace **must only** be installed onto floors with an adequate load-bearing capacity. If an existing construction does not meet this requirement, suitable measures (e.g., load distributing plate) must be taken. **Must be** in accordance with Current National laws, Building Regulations & any Rules in Force.
- Should any conflict occur between these guidelines and any Current National laws, Building Regulations, and any Rules in force then the Current National laws, Building Regulations and Rules in Force shall apply.
- The fireplace / Inglebeam installation **must be** in accordance with planning permission and local building control.
- Any solid fuel appliance installation completed in conjunction with this fireplace **must be** installed by a HETAS (England and Wales), registered installer or approved by your local building control officer. For further details go to www.hetas.co.uk . For areas outside England and Wales you must check the registered installer that may be required to ensure the appliance is installed to Current National laws, Building Regulations, and any Rules in Force. Also refer to the appliance manufacturers instructions.
- Before any electrical components are connected to the main electrical supply such as fireplace / Inglebeam ambient lighting etc **must be** checked for suitability and safety by a suitably qualified electrician as below.
- Any electrical connections made whilst fitting this fireplace / Inglebeam **must be** made by a suitably qualified and registered electrician and meet the requirements of Current National laws, Building Regulations, and any Rules in Force.
A recognised independent body for registered electricians in England, Wales, Scotland, and Northern Ireland is the National Inspection Council for Electrical Installation Contracting (NICEIC). Go to www.niceic where you will find a search facility to find NICEIC registered electricians.
- Any gas appliance installation made in conjunction with this fireplace / Inglebeam **must be** completed by a Gas Safe registered gas engineer (England and Wales), or equivalent for other Nations in accordance with the gas fire manufacturer’s instructions and Current National Laws, Building Regulations, and any Rules in Force. You can find more information and registered Gas Safe engineers at www.gassaferegister.co.uk
- Only install the fireplace / Inglebeam to a suitable solid brick wall of sound construction and suitable to support the full weight of the fireplace / Inglebeam. The brick wall **must** meet the requirements of Current National laws, Building Regulations, and any Rules in Force.
- If the fireplace / Inglebeam cannot be permanently fixed to a solid brick wall, such a an architect or structural engineer for advice.

- The Inglebeam **must not** be used as a constructional lintel or in any load bearing situations.
- The fireplace / Inglebeam is only suitable for interior installations.
- All fireplace / Inglebeam mechanical fixings **must be** Stainless-Steel and be totally corrosion and heat proof and of adequate size and strength to fix the fireplace / Inglebeam safely & securely.
- The consequences of failure of a fireplace / Inglebeam incorrectly installed and secured are extremely serious. It is essential that the fireplace / Inglebeam is installed and secured to withstand foreseeable abuse such as a child pulling down on a cantilevered shelf / Inglebeam etc.
- Fixing dowels or alternatively threaded studs' nuts and washers **must be used** when fitting the Inglebeam. The Inglebeam and any other fireplace overhanging components **must be** adequately restrained in all instances, as they are liable to tip forward. It is imperative to ensure any Inglebeam or fireplace overhanging components are securely fixed into the brick wall so there is no possibility of any piece tipping and falling.
- **Never** cut the dowels or threaded studs supplied to any Inglebeam product or fireplace.
- **All** dowels or threaded studs with nuts and washers supplied to any Inglebeam, or fireplaces **must be** used.
- Always inform the user when the fireplace / Inglebeam can be used for the first time considering the full drying times for resins and adhesives etc that have been used.
- Fixing brackets **must be** used when installing the fireplace / Inglebeam.
- Lock wire with anchorage points **must be** used when installing the fireplace.
- The fireplace / Inglebeam **must be** completely adhered to the brick wall with suitable adhesive. Such products should only be used for applications approved by the manufacturer. If there is any doubt, the adhesive manufacturer should be consulted.
- Gypsum based products is not recommended as an adhesive and should **not** be used.
- **Never** use adhesive alone to fit the fireplace / Inglebeam.
- Bracket fixings, anchorage points and dowels to be installed into brickwork, **not** plaster / render.
- All mechanical fixings to be chased into the mounting wall brickwork to enable complete contact to all mating rear surfaces of the fireplace to the brick wall, this is required so a total bond can be made when adhering the fireplace Inglebeam parts to the brick wall.
- The fireplace / Inglebeam is **not** suitable for any open burning grates or appliances and **must not** be used.
- Ensure that the chimney register plate and the stove flue pipe is not fixed or touching the Inglebeam or fireplace, this will cause excessive heat transfer resulting in damage.
- Ensure all mechanical fixings do not obstruct total face to face contact of any fireplace Inglebeam mating parts.
- Use suitable heat proof white or clear stone silicone adhesive between **all** mating stone pieces. (Ensure to protect fireplace visible stone surfaces from silicone over spill).
- **Never** drag fireplace mating stone pieces together when fixing, as this could chipping and scratching.
- Grouting of stone joints can be made by using suitable white tile glue ensuring you wash of residue with clean water.
- It is recommended that after installation and when the fireplace has completely dried, that a suitable stone sealer is used to seal all visible stone surfaces, only when the appliances being used is switched off and the appliance and fireplace are completely cold. Refer to your fireplace retailer for advice. (This applies to natural stone materials only).
- You **must** supply and fit, in correct position a data plate showing all correct information in accordance with Current National laws, Building Regulations and any Rules in Force.
- Ensure that purpose provided room ventilation is provided in accordance with Current National laws, Building Regulations, and any Rules in Force.

- Ensure these fitting guidelines together with the fireplace Customer Care & Safety sheet are given to the customer. Subsequently these to be passed on to any new homeowner or occupier.

Important.

Ensure the fireplace / Inglebeam is fixed to the brick wall safely and securely and fitted correctly to all Current National laws, Building Regulations, and any Rules in Force.

If this cannot be achieved **do not install** the fireplace / Inglebeam until any fault is rectified, to ensure a safe & secure fireplace / Inglebeam installation.

Safety precautions.

- Use all necessary safety clothing, for example:
- Suitable dust masks where there is a risk of dust contamination
- Suitable protective gloves.
- Suitable Protective footwear.
- Suitable Protective eye goggles.
- Never wear loose clothing or jewellery.
- Ensure long or loose hair is adequately protected, so as not to be a hazard when using tools etc.
- Ensure all fitting tools and equipment to be used are in good working order and safety approved and suitable for the use intended.
- Always comply with all Current Health & Safety Regulations.
- This fireplace has parts that are irregular in shape and above 25kg in weight, therefore installation is recommended for more than one person or suitable lifting equipment to be used.

Weight of Inglebeam. *(All weights are approximate).*

Aggregate (Solid).

- 1200mm wide: 55kgs.
- 1350mm wide: 65kgs.
- 1500mm wide: 75kgs.

Ceramax (Hollow).

- 1200mm wide: 14kgs.
- 1350mm wide: 16kgs.
- 1500mm wide: 21kgs.

Types of fires suitable for the Tavistock suite.

The chimney builders opening must be of a suitable size to comply with the minimum clearances to the fireplace and Inglebeam from the appliance being used. Also refer to the appliance manufacturer to check if the stove requires higher clearances than shown in these guidelines as these must also be respected.

- Closed burning multi fuel, or wood burning stoves manufactured to ^{UK}EN13139 standards of compatible size for the fireplace, chimney, and flue, with a stove rated temperature of no more than 65°C above ambient temperature from the underside of the stove to the hearth, complying with current Building Regulations and any Rules in Force.
- Closed burning gas stoves manufactured to ^{UK}EN13139 standards of compatible size for the fireplace, chimney, and flue, with a stove rated temperature of no more than 65°C above ambient temperature from the underside of the stove to the hearth, complying with current Building Regulations and any Rules in Force.
- Electric effect stoves manufactured and approved to ^{UK}EN13139 standards of compatible size for the fireplace.

Clearances.

- Refer to page 14 for Inglebeam clearances.
- Refer to page 15 for chamber clearances.

Chimney Type.

- Class 1. The chimney and flue **must be** in accordance with Current Building Regulations and any Rules in Force, with a suitable builder opening and flue, for your selected fireplace and appliance combination.
- Chimneys and flues **must be** swept and tested by an approved chimney sweep prior to fireplace installation.

Fireplace inspection and precautions.

- Before installation the fireplace / Inglebeam **must be** thoroughly checked for faults or damage. If any fault or damage is observed the fireplace / Inglebeam **must not** be installed, and the problems reported to your fireplace retail supplier. No claims of this nature will be accepted after the fireplace / Inglebeam is installed.
- **Ensure** the Inglebeam, chamber panels and all supplied stone parts are handled with **care and never dropped.**
- **Always protect** the Inglebeam, chamber panels and all supplied stone parts from any substance, the finish used to the Inglebeam is water based to give fire resistance. Any fluid, plaster/ render etc that contacts the Inglebeam, chamber panels and all supplied stone parts is liable to cause damage.
- **Never** use any type of masking tape to protect the Inglebeam, legs and chamber panels as it will be possible to remove the Inglebeam and chamber surface finish when the masking tape is removed.

Fitting Guidelines. *(To be used in conjunction with the diagrams).*

This fireplace will require other fixing materials including:

- Suitable stainless-steel screws, washers, and wall plugs.
- Heat resistant silicone adhesive suitable for stone, brickwork & masonry in clear or white finish that must have a minimum temperature rating range from -20°C to $+1200^{\circ}\text{C}$.

Important.

When silicone adhesive is mentioned in the guidelines then the above is the minimum requirement.

- Heat resistant Thixotropic two-part chemical anchor resin suitable for stone, brickwork, masonry, and metal with a minimum temperature range from -20°C to $+300^{\circ}\text{C}$.

Important.

When Thixotropic chemical resin is mentioned in the guidelines then the above is the minimum requirement.

- White cement.
- Silver sand.
- Suitable mortar.
- Suitable thread locking fluid.
- Suitable sealer for brickwork.

Always follow the manufacturer's instructions for all adhesives and cements.

Important.

- If any model of our Inglebeam range has been ordered to a non-standard size, it is often required to be manufactured with more dowel or threaded stud fixings and brackets than our standard sized models. These extra dowel or threaded stud, and bracket fittings **must be** installed as described below for our standard models. **Never** cut or remove any dowel or threaded stud or bracket that is supplied with the model of Inglebeam.
- The Inglebeam range is manufactured in two types of material, either Aggregate (solid) or Ceramax (hollow) depending on the customer's request, it is essential that the material used is identified to ensure the correct installation procedures are undertaken. Refer to drawings.

⚠ Ensure the installation area is restricted to all people and animals until all fitting materials have fully dried and cured and all fireplace components are deemed to be installed correctly and safely.

- 1) With suitable testing equipment check for live electrical cables or gas pipes and any other obstructions or connections that maybe obscured to the area of intended fireplace, chamber and Inglebeam installation. If found use a suitably qualified person to remove and make safe.
- 2) Remove all wall coverings and emulsion in area of intended fireplace / Inglebeam installation.
- 3) In properties with traditionally plastered / rendered brick walls the plaster / render to be cut back to enable the fireplace / Inglebeam to be fixed directly to the brickwork behind. The plaster / render can then be made good around the fireplace / Inglebeam after installation. The plaster / render to be cut back and removed from the area of fireplace / Inglebeam installation, remove up to approximately 10mm outside the profile of fireplace / Inglebeam to be installed. All fixing brackets and fixings to be recessed into brickwork to enable all fireplace / Inglebeam parts to mate with the brick wall without obstruction. This is good practice as there will always be a risk of the fireplace / Inglebeam becoming unstable should a failure of the plaster / render occur.
- 4) Ensure the chimney brickwork face is completely sound, dry, dust and contamination free before installation. Seal all fixing areas with appropriate sealer. (Note: subject to adhesive manufacturer's instructions.
- 5) Correctly prepare the chimney builders opening. Refer to current Building Regulations and any Rules in Force.
- 6) Completely bed the hearth to the floor using suitable 1-part white cement and 5-parts silver sand, ensure the hearth is central to the chimney and builders opening and level to all planes. **Do not** use any coloured cement or sand or any other coloured products as this will discolour the stone.
- 7) Completely bed the rear base using suitable 5-parts silver sand to 1-part of white cement ensuring the top surface is level in all planes and flush with the top surface of the hearth. **Do not** use any coloured cement or sand or any other coloured products as this will discolour the stone.
- 8) Permanently install the two rear and two side brick effect chambers with front leg return panels into position on top of the rear base within the chimney builders opening, ensure that all panels are vertical and square and in correct position in relation to the dimensions as shown on page 9. Note: The side chamber panels will normally require cutting to clear the chimney lintel as all chamber panels should extend above the lower edge of the Inglebeam within the builders opening to ensure that when viewed at a lower position such as sitting down the top of the brick effect chambers are still in view rather than the raw builders opening, **do not** cut the front leg returns. Mark the position of all bracket positions provided to the top of each chamber panel to the builders opening brickwork. Drill the brick wall to the marked positions for suitable stainless-steel wall plugs. Fit all wall plugs. Using suitable stainless-steel screws and washer through the hole in each bracket securely fit each chamber panel to the brick wall. Note: If any of the chamber panels cannot be fixed totally against the builders opening

brickwork then suitable stainless-steel steel spacers will be required. (Sample as shown on page 11). Use silicone adhesive between all mating joints of the chamber panels and mating chamber panels to the rear of the leg sections ensuring the silicone adhesive is at least 2mm thick as this is required for thermal expansion. Fully back fill all chamber panels using 5-parts vermiculite granules and 1-part cement. Do not saturate the mix; only use just enough water to allow mixing. Staunch the top edges of all chamber panels within the builders opening with suitable mortar.

- 9) Permanently fix the Inglebeam into correct position to the brick wall and on top of upper leg sections. See instructions below. Our Inglebeam range is available with dowel fixings or threaded stud, nut and washer fixing, depending on your fixing requirements. The dowel fixing Inglebeam models are normally used when it is not possible to gain access to the rear side of solid brick walls of which the Inglebeam is to be fitted; conversely the threaded stud, nut and washer fixings are used when access to the rear side of the brick wall is possible.

Note: Relating to the requirement of drilling angled airways when using dowel fixings as stated within these guidelines.

* **Syringe applicators** are available from some Thixotropic chemical resin manufacturers, if this type of applicator is used providing the nozzle is of adequate size to be fully inserted and to reach the base to each hole, then there is no requirement to drill the angled airway providing the resin is applied from the base of each hole gradually working to the top of each hole to ensure any air is not trapped and expelled from each hole as the resin is applied. Refer to the manufacturer's instructions.

Inglebeam with Dowel fixings and strap brackets.

Identify the Inglebeam material either Aggregate (solid) or Ceramax (hollow).

- a) **Ceramax only:** Ensure all the threaded dowels and all threaded inserts to the Inglebeam are fully clean and contamination free. Apply suitable thread locking fluid to all threads to each dowel whilst being screwed into each Inglebeam threaded insert, fully screw into each threaded insert, and tighten. **Warning:** Do not over tighten.

Continue installation as below.

Inglebeam.

- b) Pull the left- and right-hand fixing bracket located to the rear of the Inglebeam straight above the Inglebeam top surface. Mark each Inglebeam fixing dowel and outline of Inglebeam in correct position above the legs to the brick wall.
- c) Drill a hole into the brick wall at each Inglebeam dowel fixing position using a drill bit that is double the diameter of the Inglebeam dowel. Ensure the holes are of adequate depth to fully accommodate all dowels to enable the complete rear surface of the Inglebeam to be in contact with the brick wall. The holes must be of adequate size and in correct position to ensure the Inglebeam does not have to be forced into the holes and allow space for the thixotropic chemical resin to create a total bond around each dowel. **Warning.** If the Inglebeam dowels are forced into the holes within the brick wall this will create a very large force that will cause damage and cracking to the Inglebeam either immediately or later.
- d) Using a 6mm diameter masonry bit; drill an angled airway from the base of each dowel hole exiting above the dowel hole to the brick wall surface. (This is required to allow air to escape when adding Thixotropic chemical resin to the dowel holes within the brick wall). *
- e) Ensure all dowel holes within the brick wall and Inglebeam dowels are clean, and contamination free. Ensure the rear surface of the Inglebeam and the surface of the brick wall are totally clean and contamination free. Seal brickwork subject to silicone adhesive manufacturer's instructions.
- f) Dry fit the Inglebeam to the brick wall. Mark the bracket positions to the brick wall for suitable stainless-steel steel wall plugs, screws, and washers. Take dimensions for suitable trestles to be used when permanently fixing the Inglebeam to the brick wall. The trestles must be able to support the weight of the Inglebeam and be stable whilst all adhesives and resins are curing.

Locate or manufacture suitable trestles. Remove Inglebeam. Drill the brick wall at your pre marked bracket positions to accommodate suitable stainless-steel steel wall plugs. Fit wall plugs.

- g) Use thixotropic chemical resin to fully fill all Inglebeam dowel holes within the brick wall. Use silicone adhesive to bond all mating surfaces of the Inglebeam to the brick wall and legs. Ensure the two types of adhesives do not make contact. Position the Inglebeam dowels into the dowel holes within the brick wall containing the uncured Thixotropic chemical resin. Ensure the dowels are fully located into the holes to enable the rear surface of the Inglebeam to be fully bonded to the brick wall with the silicone adhesive. Use suitable trestles that are stable to support the weight of the Inglebeam in correct position. Using suitable stainless-steel steel screws and washers through each Inglebeam bracket securely fix the Inglebeam to the brick wall.
- h) When all resins and glues are fully cured, (Refer to the Thixotropic resin and adhesive manufacturer's instructions for use, safety and curing times etc). Remove trestles.
- i) Make good the wall, plaster / render around the Inglebeam and legs ensuring nothing is spilt onto the finished surface.
- j) **Never** use any type of masking tape to protect the Inglebeam, legs and chamber panels as it will be possible to remove the Inglebeam and chamber surface finish when the masking tape is removed.
- k) **Ensure** the installation area around the Tavistock suite is restricted to all people and animals until all fitting materials have fully dried and cured and all fireplace components are deemed to be installed correctly and safely.
- l) **Inform** the customer / user of the time required before any appliance can be used after the installation is complete.
- m) It is recommended that any stone part supplied when fully dry are sealed with a suitable stone sealer, refer to the manufacturer's instructions.

Warning: Do not seal the Inglebeam and chamber panels as this will damage the surface finish.

Inglebeam with threaded stud, nut, washer fixings and strap brackets.

Identify the Inglebeam material either Aggregate (solid) or Ceramax (hollow).

- a) **Ceramax only:** Ensure all the threaded dowels and all threaded inserts to the Inglebeam are fully clean and contamination free. Apply suitable thread locking fluid to all threads to each dowel whilst being screwed into each Inglebeam threaded insert, fully screw into each threaded insert, and tighten. **Warning:** Do not over tighten.

Continue installation as below.

Inglebeam.

Solid aggregate and Ceramax:

Pull the left- and right-hand fixing bracket located to the rear of the Inglebeam straight above the Inglebeam top surface. Mark each Inglebeam fixing threaded stud and outline of Inglebeam in correct position above the legs to the brick wall.

- b) Drill a hole into the brick wall at each Inglebeam threaded stud fixing position using a bit that is just slightly larger than the diameter of the threaded studs; ensure to drill completely through the brick wall. The holes must be of adequate size and in correct position to ensure the Inglebeam threaded studs do not have to be forced into the holes. **Warning.** If you force the Inglebeam studs into the holes this will create a very large force that will cause damage and cracking to the Inglebeam either immediately or later.




- c) Dry fit the Inglebeam to the brick wall. Mark each bracket position to the brick wall for suitable stainless-steel steel wall plugs. Take dimensions for suitable trestles to be used when permanently fixing the Inglebeam to the brick wall. The trestles must be able to support the weight of the Inglebeam and be stable whilst all resins and adhesives are curing. Locate or manufacture suitable trestles. Remove the Inglebeam. Drill the brick wall at your pre marked bracket positions to accommodate suitable stainless-steel steel wall plugs. Fit wall plugs.
- d) Ensure the rear surface of the Inglebeam and the front surface of the brick wall are totally clean and contamination free. Seal brickwork subject to the silicone adhesive manufacturer's instructions.
- e) Use silicone adhesive to all mating surfaces of the Inglebeam to the brick wall. Position the Inglebeam threaded studs through the corresponding stud holes within the brick wall. Ensure the threaded studs are fully located into the holes to enable the rear surface of the Inglebeam to be fully bonded to the brick wall with the silicone adhesive.
- f) Position trestles into position to support the weight of the Inglebeam.
- g) Ensure the threaded studs are fully clean without contamination. Place the washers onto the threaded studs, use suitable thread and nut locking fluid and screw the nuts onto each threaded stud to the rear side of the brick wall. Fully tighten the nuts ensuring the Inglebeam is fully against the surface of the brick wall ensuring a total bond has been made between the brick wall and the Inglebeam. **Warning.** Do not over tighten the stud nuts as this will cause damage to the Inglebeam.
- h) Using suitable stainless-steel steel screws and washers through each Inglebeam bracket and securely fix the Inglebeam to the brick wall.
- i) When all adhesives have fully cured (refer to manufacturer's instructions for use, safety and curing times etc). Remove trestles.
- j) Make good the wall, plaster / render around the Inglebeam and legs ensuring nothing is spilt onto the finished surface.
- k) **Never** use any type of masking tape to protect the Inglebeam, legs and chamber panels as it will be possible to remove the Inglebeam and chamber surface finish when the masking tape is removed.
- l) **Ensure** the installation area around the Tavira suite is restricted to all people and animals until all fitting materials have fully dried and cured and all fireplace components are deemed to be installed correctly and safely.
- m) **Inform** the customer / user of the time required before any appliance can be used after the installation is complete.
- n) It is recommended that any stone parts when fully dry are sealed with a suitable stone sealer, refer to the manufacturer's instructions.

Warning: Do not seal the Inglebeam and chamber panels as this will damage the surface finish.

EXAMPLE OF INGLEBEAM IS SHOWN MANUFACTURED IN AGGREGATE (SOLID) WITH DOWEL & BRACKET FIXINGS.
REFER TO THE FITTING GUIDELINES FOR:
A) THREADED STUD & BRACKET FITTINGS.
B) INGLEBEAM DOWEL & THREADED STUD INCLUDING BRACKET FITTINGS IF MANUFACTURED IN CERAMAX (HOLLOW).


SUPPLIED PARTS IDENTIFICATION

- 1) INGLEBEAM
- 2) HEARTH (EITHER 1 PIECE OR 3 SECTIONS)
- 3) REAR BASE
- 4) REAR CHAMBER PANEL WITH BRACKET X 2
- 5) SIDE CHAMBER PANEL INCLUDING LEG RETURN WITH BRACKET X 2
- BEAM DOWELS & BRACKETS

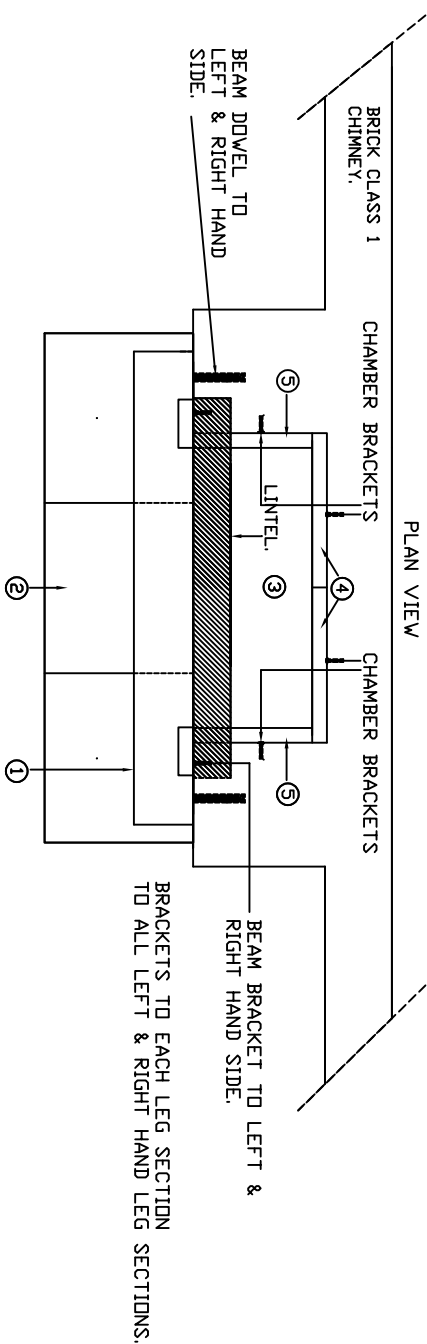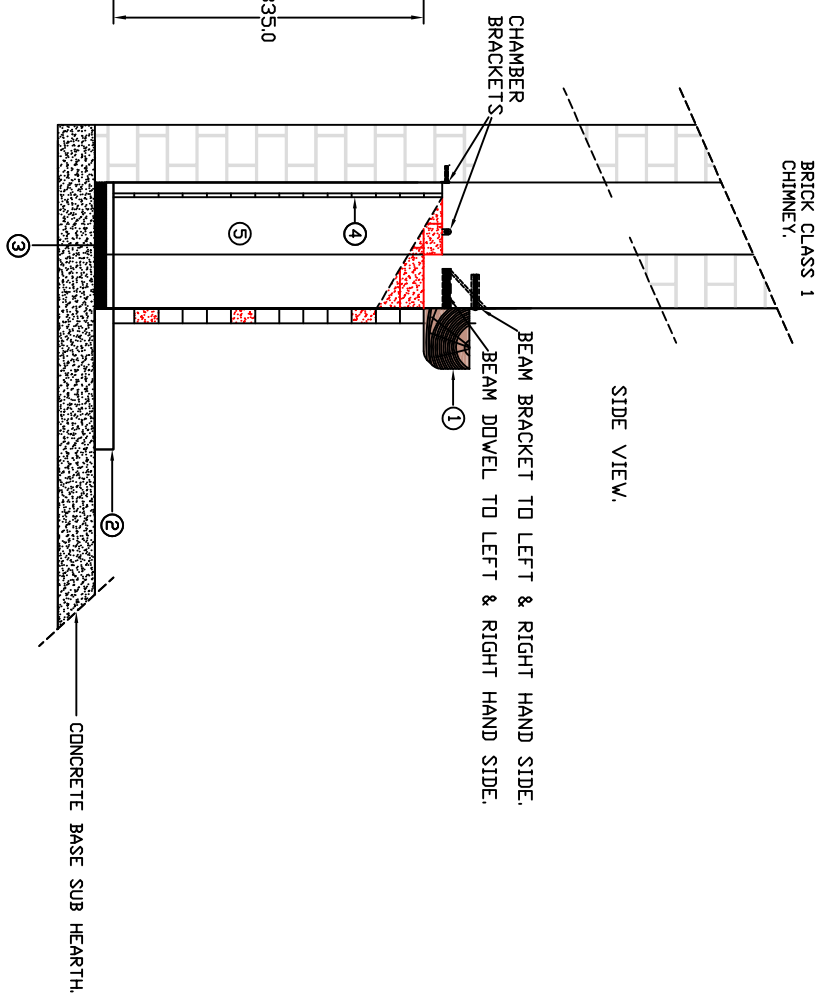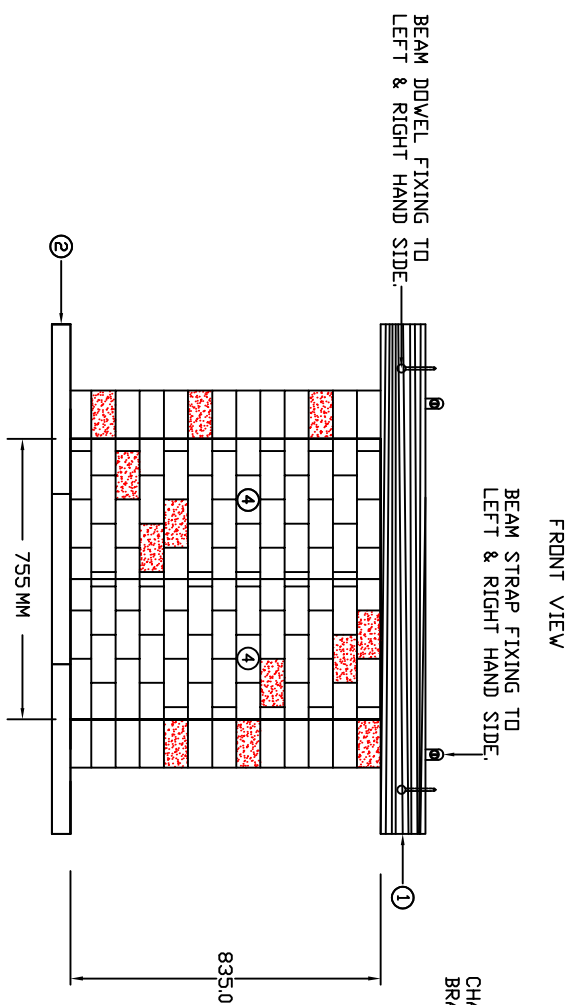

EXAMPLE OF FITTING BEAM USING
TRESTLES AS SUPPORTS. NOTE:
BEAM DOWEL FIXING SHOWN. USE
TRESTLES ALSO TO SUPPORT THE
THREADED STUD BEAM VERSION.


SIDE VIEW.

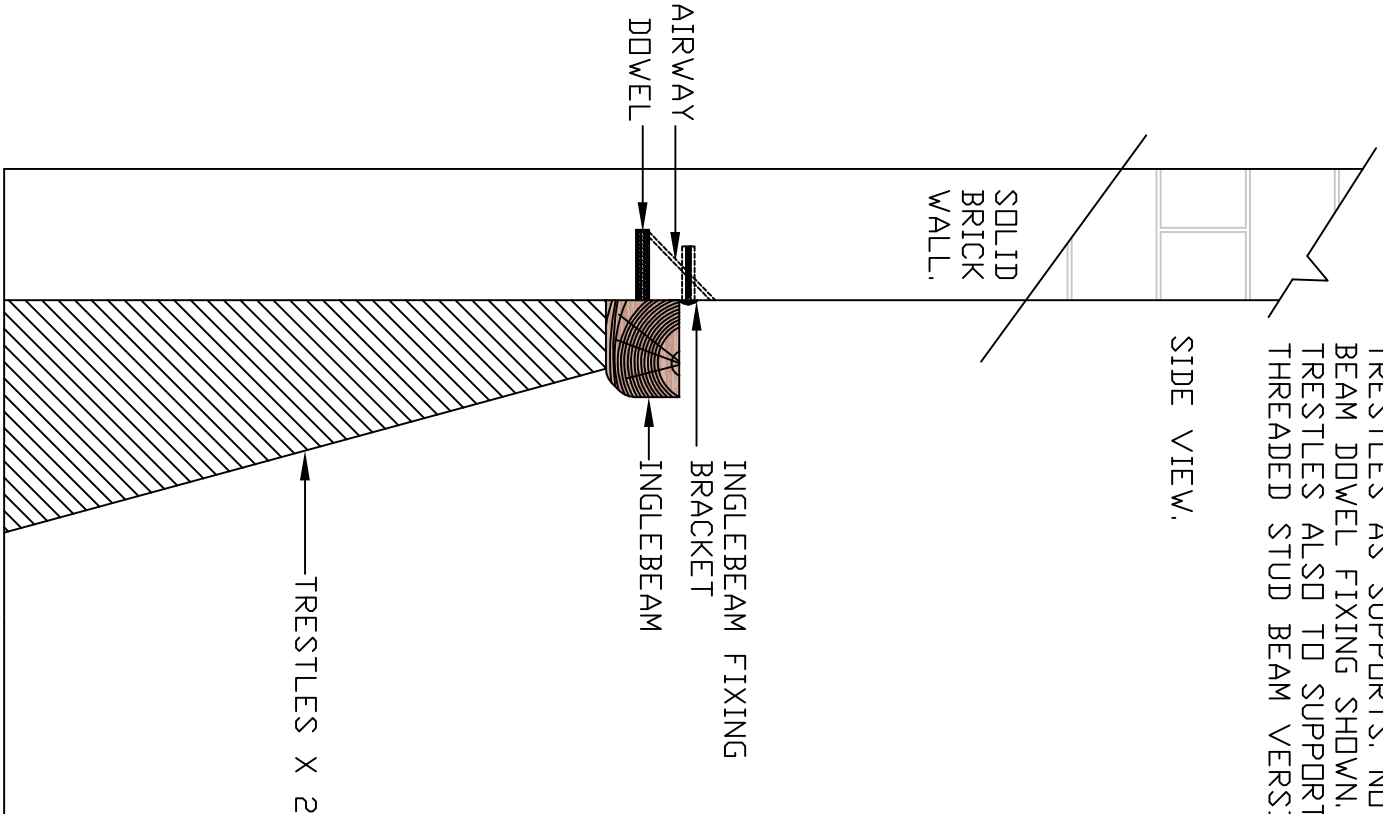


FRONT VIEW.

NOTE: DOWEL VERSION SHOWN


NOTE: THE ALTERNATIVE THREADED STUD
& BRACKET FITTINGS ARE POSITIONED AS
THE DOWEL & BRACKET FIXINGS SHOWN.
SEE RELEVANT GUIDELINE SECTIONS
THAT COVER THE FITTING OF BOTH
VERSIONS INCLUDING INGLEBEAMS MANUFACTURED
IN CERAMAX (HOLLOW).

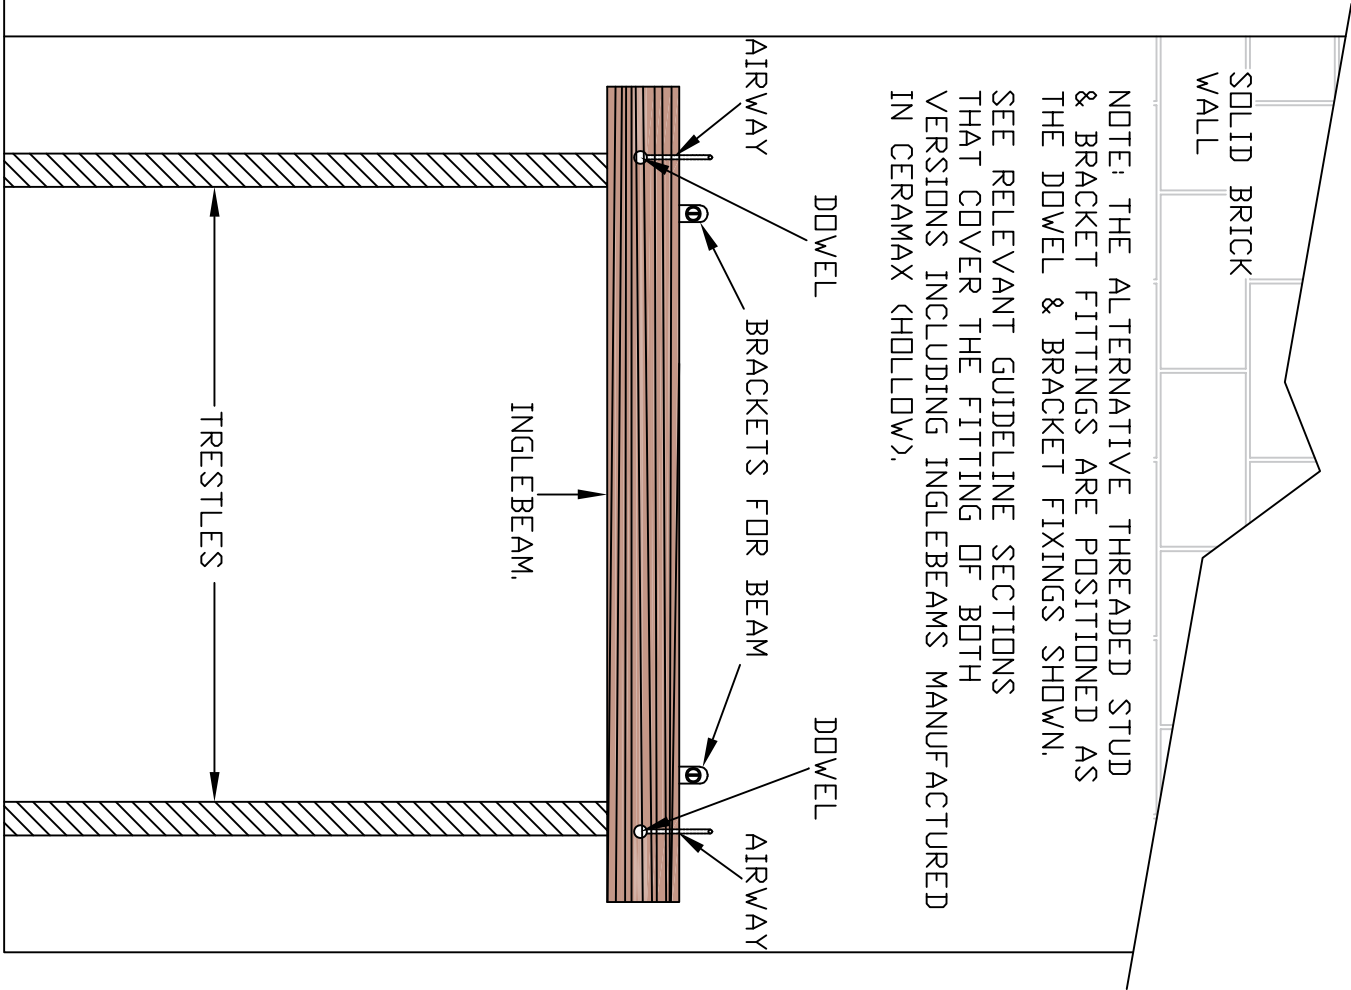


SIDE CHAMBER
WITH FRONT
LEG RETURN
FIXING BRACKET.

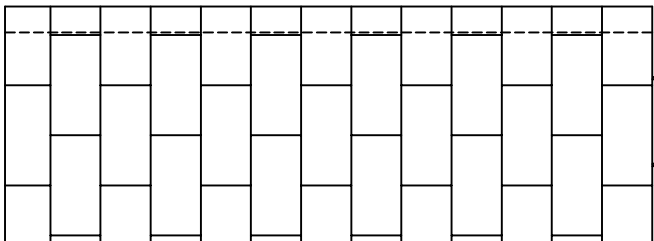


REAR CHAMBER
FIXING BRACKET

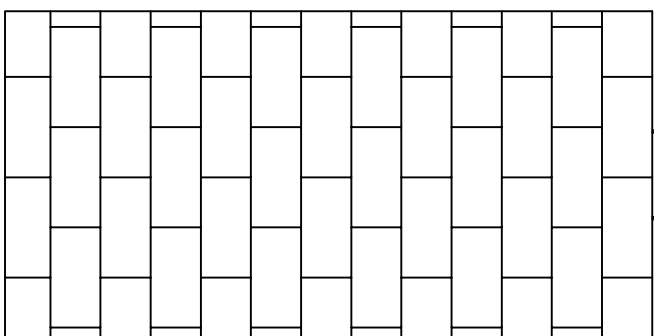

REAR CHAMBER
FIXING BRACKET

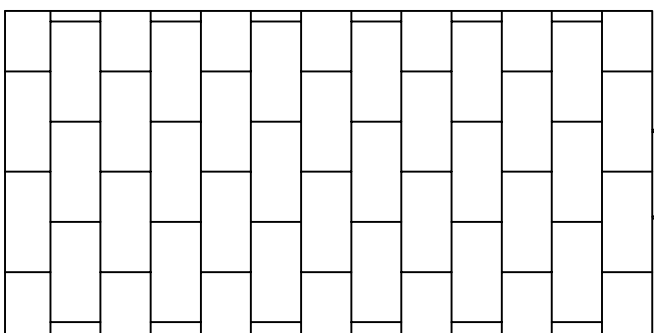



SIDE CHAMBER
WITH FRONT
LEG RETURN
FIXING BRACKET.

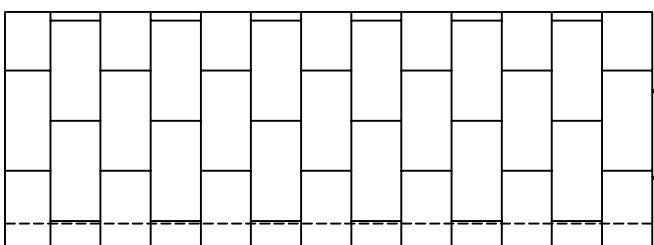


BRICK CLASS 1 CHIMNEY. PLAN VIEW.

SLEEVE SPACER TO ALL CHAMBER BRACKETS
IF THE CHAMBER PANELS ARE NOT FLUSH
AGAINST THE BUILDERS OPENING BRICK WORK

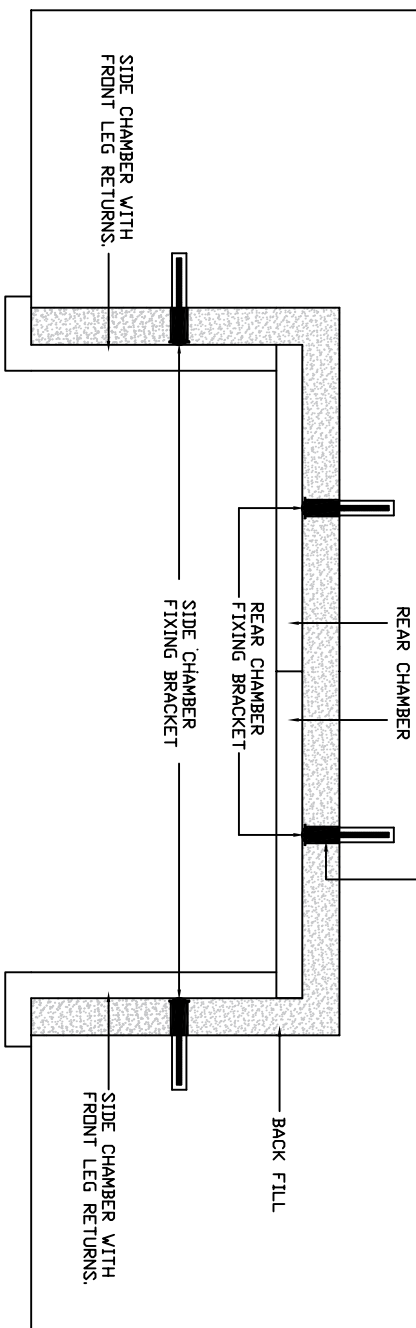

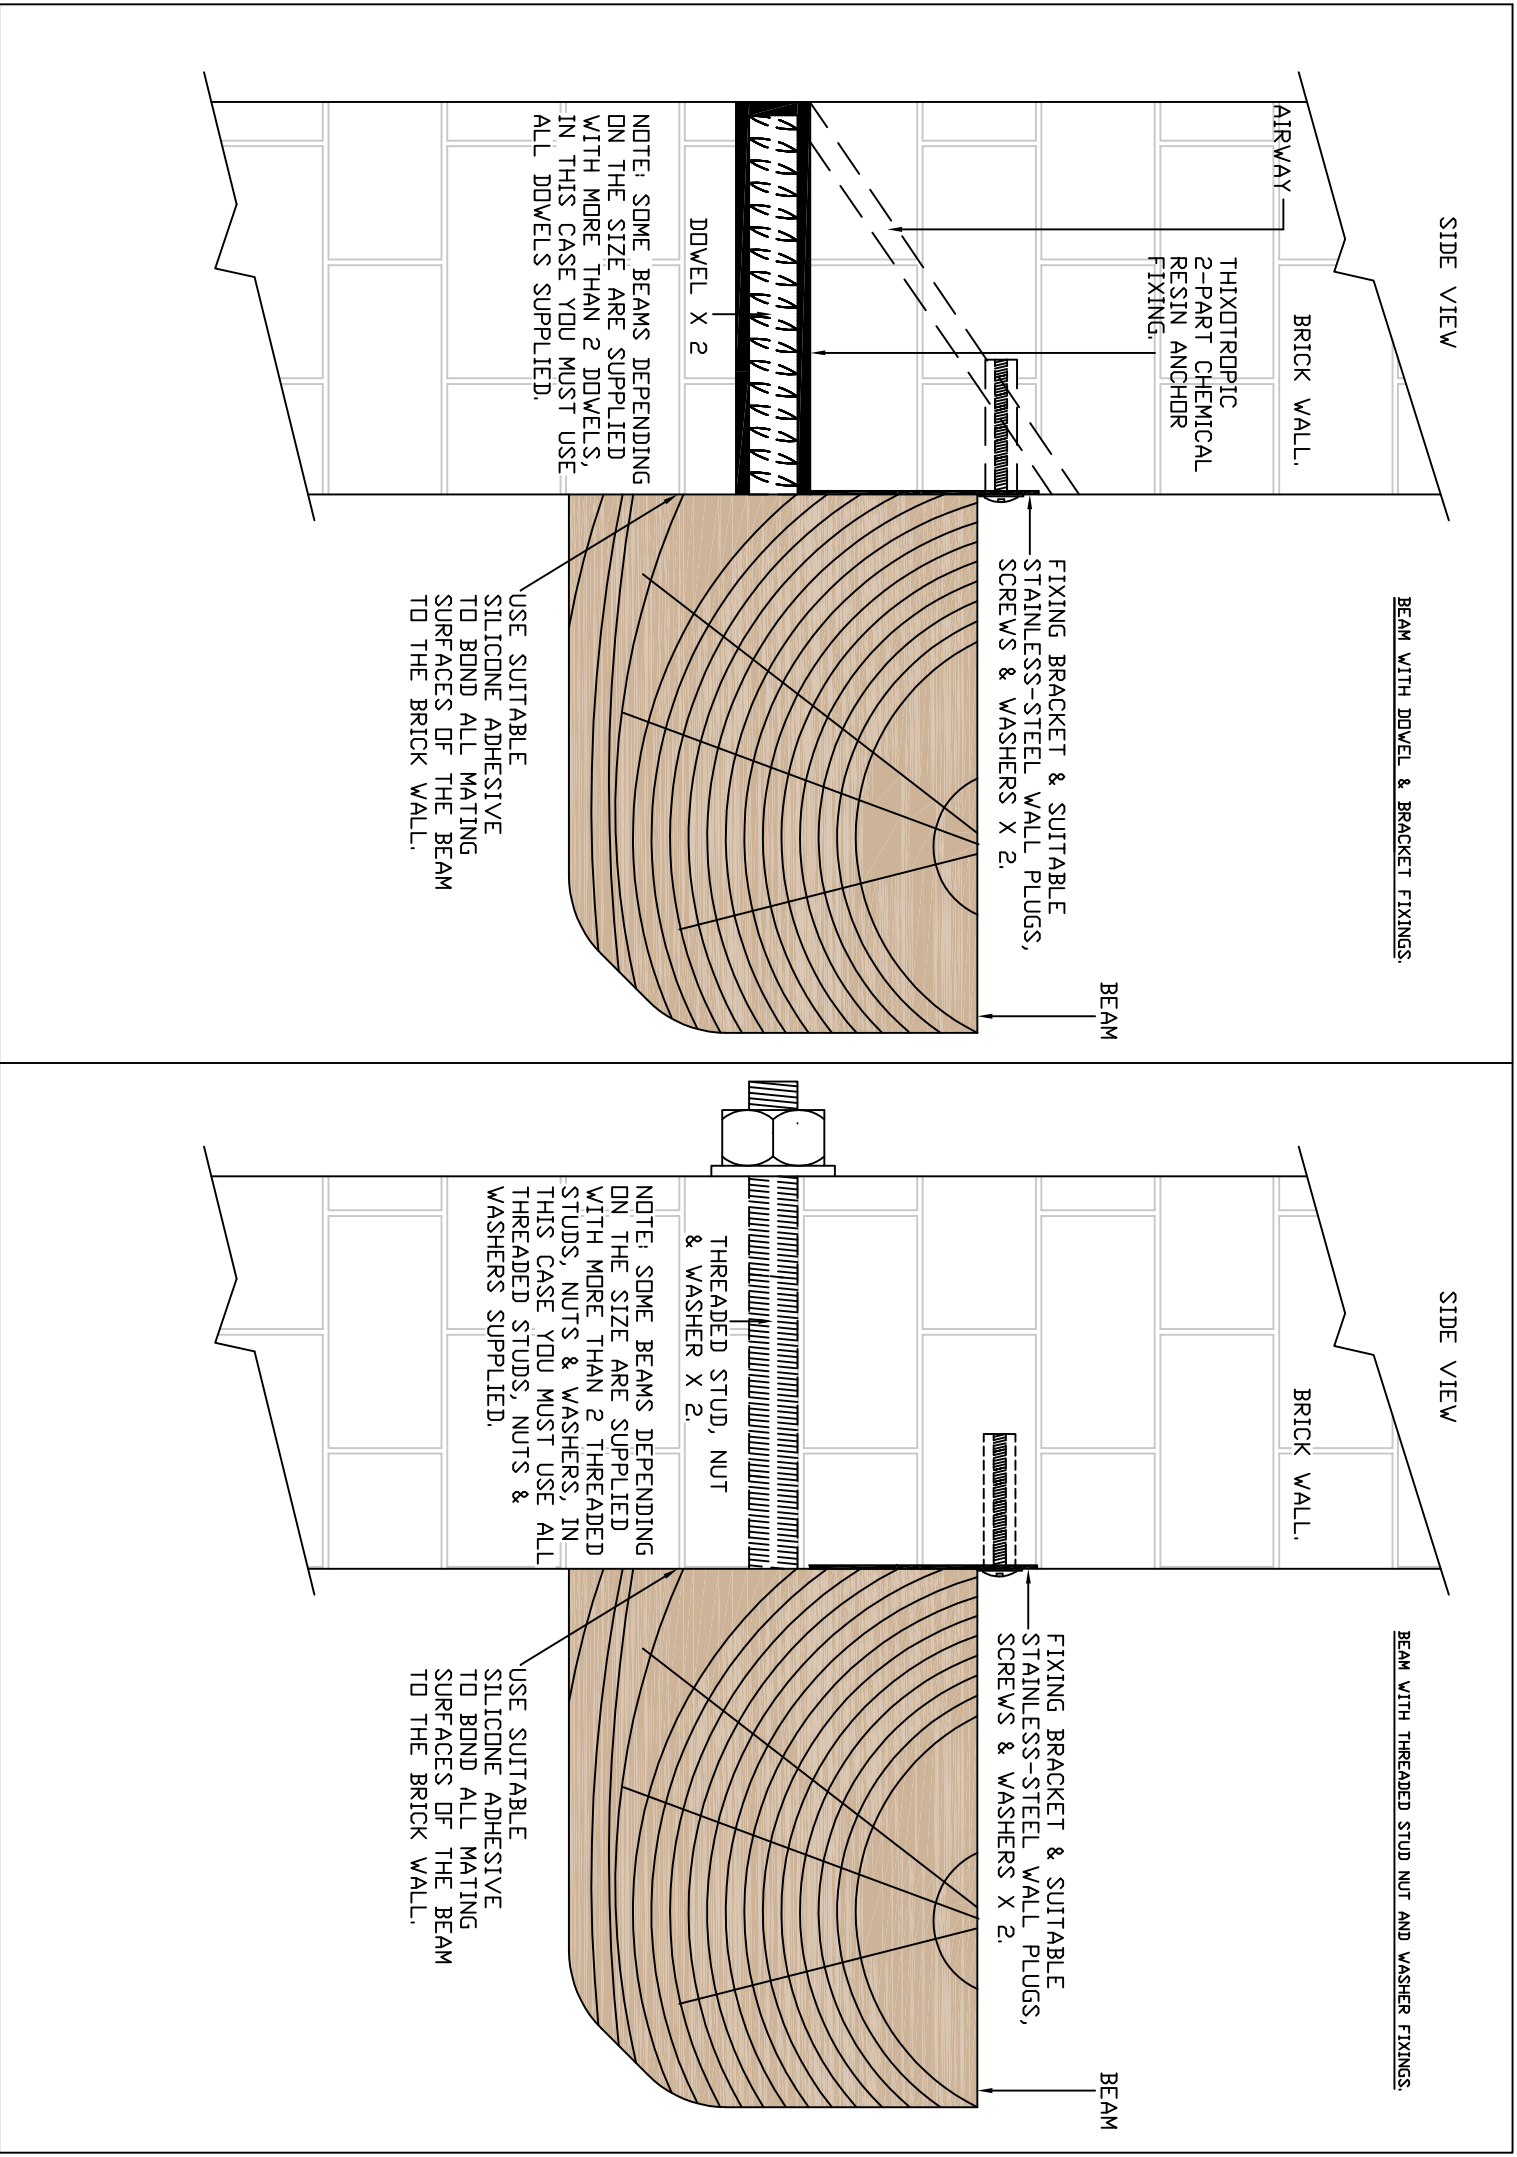


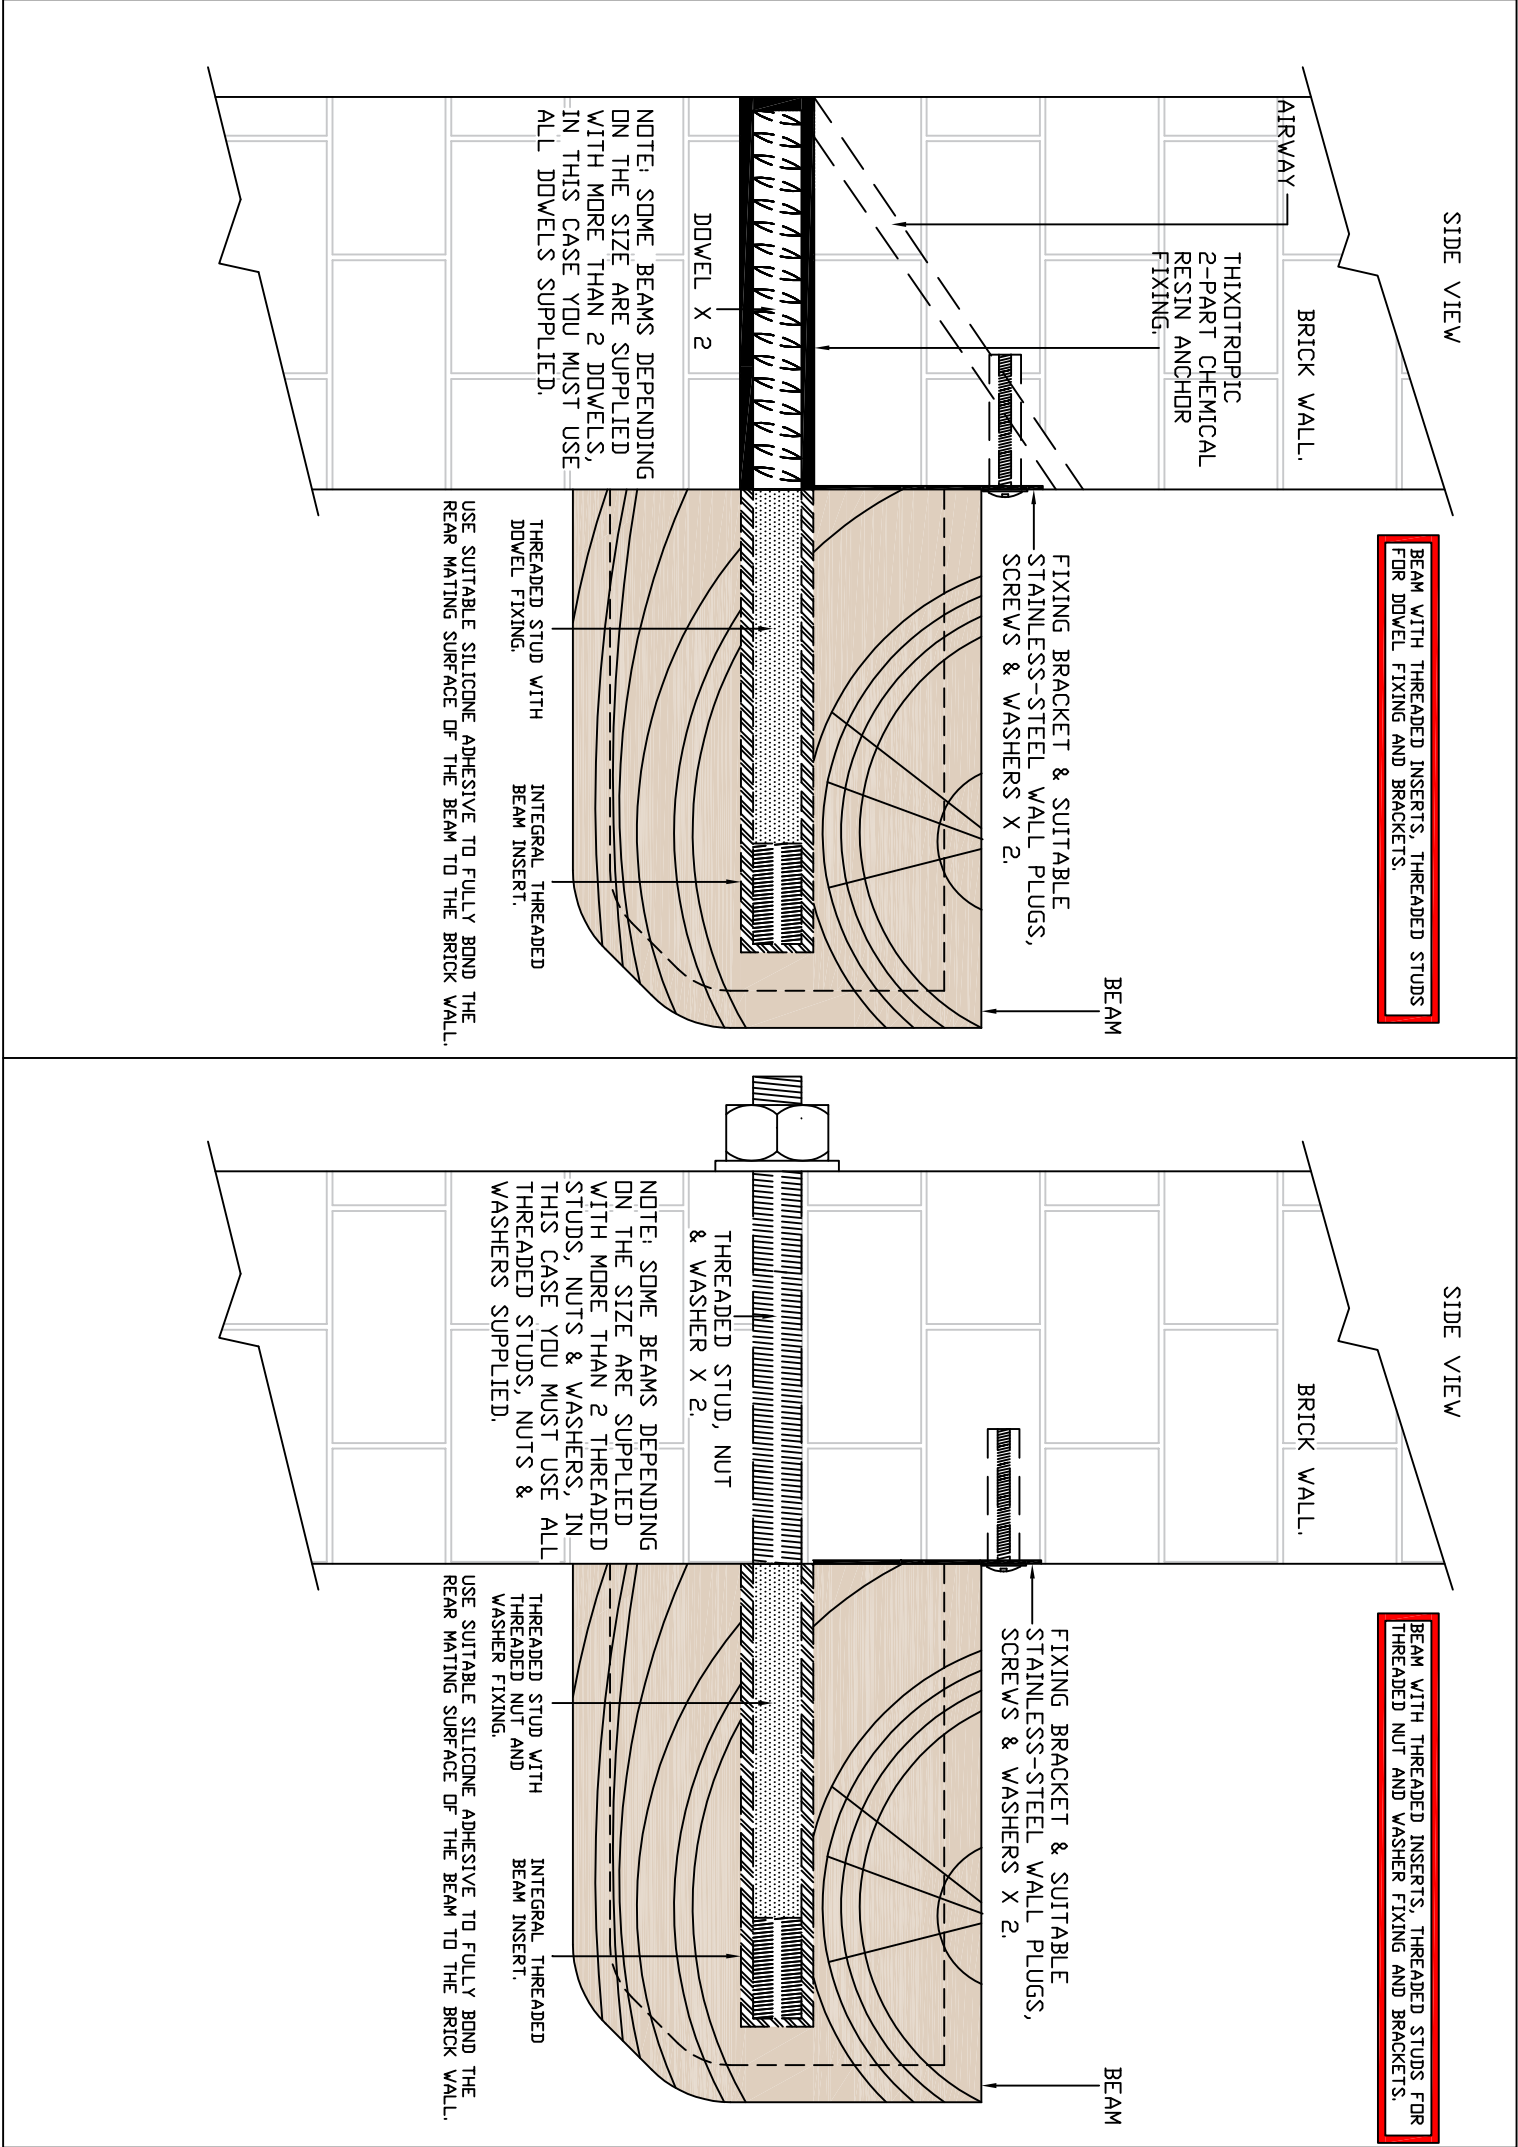

CLEARANCES WHEN THE STOVE IS NOT PLACED PARTIALLY OR COMPLETELY UNDER THE BEAM.

IMPORTANT!


THE DIMENSIONS SHOWN APPLY TO CLOSED MULTI FUEL, WOOD BURNING STOVES AND GAS STOVES WITH AN APPROVED NOMINAL HEAT OUTPUT NOT ABOVE 5kW AND OPERATED AS STATED IN THE STOVE MANUFACTURER'S INSTRUCTIONS. FOR EVERY 1kW ABOVE AN APPROVED NOMINAL HEAT OUTPUT OF 5kW ADD 50mm EXTRA TO THE DIMENSIONS SHOWN. EXAMPLE: IF THE STOVE HAS A NOMINAL HEAT OUTPUT OF 7kW YOU REQUIRE TO ADD 100mm TO THE DIMENSIONS SHOWN. ALWAYS REFER TO THE STOVE MANUFACTURER'S INSTRUCTIONS TO CHECK IF THE CLEARANCES REQUIRE TO BE LARGER THAN SHOWN, IF SO THESE MUST BE RESPECTED.

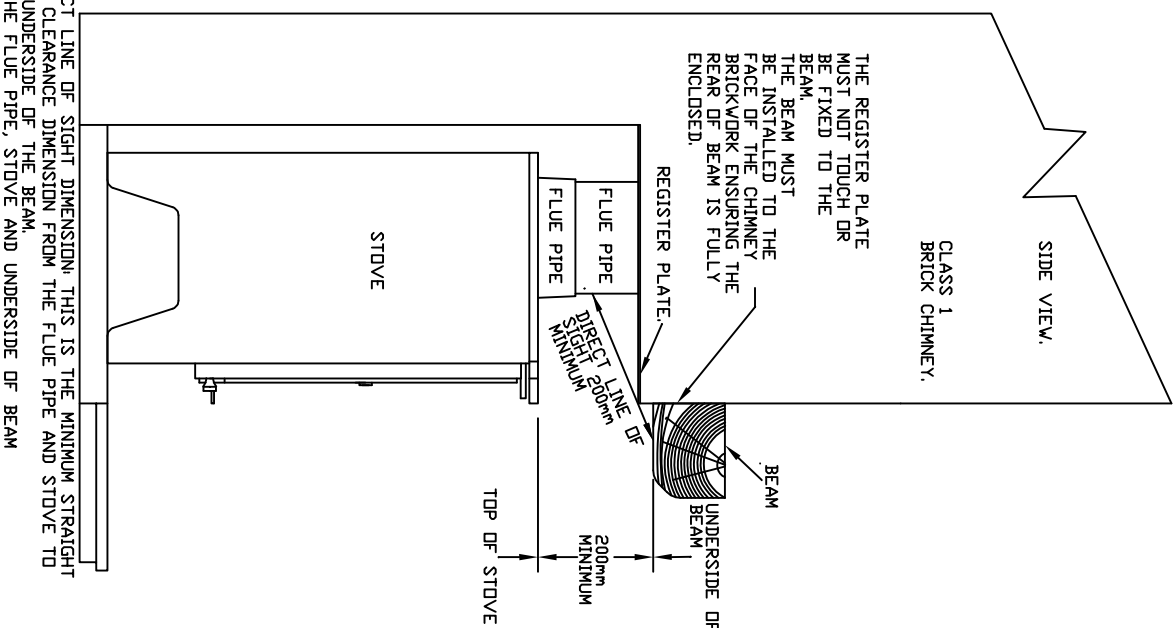

CLEARANCES WHEN THE STOVE IS PLACED NO MORE THAN A MAXIMUM OF 50mm UNDER THE BEAM.

IMPORTANT!


THE DIMENSIONS SHOWN APPLY TO CLOSED MULTI FUEL, WOOD BURNING STOVES AND GAS STOVES WITH AN APPROVED NOMINAL HEAT OUTPUT NOT ABOVE 5kW AND OPERATED AS STATED IN THE STOVE MANUFACTURER'S INSTRUCTIONS. FOR EVERY 1kW ABOVE AN APPROVED NOMINAL HEAT OUTPUT OF 5kW ADD 50mm EXTRA TO THE DIMENSIONS SHOWN. EXAMPLE: IF THE STOVE HAS A NOMINAL HEAT OUTPUT OF 7kW YOU REQUIRE TO ADD 100mm TO THE DIMENSIONS SHOWN. ALWAYS REFER TO THE STOVE MANUFACTURER'S INSTRUCTIONS TO CHECK IF THE CLEARANCES REQUIRE TO BE LARGER THAN SHOWN, IF SO THESE MUST BE RESPECTED.

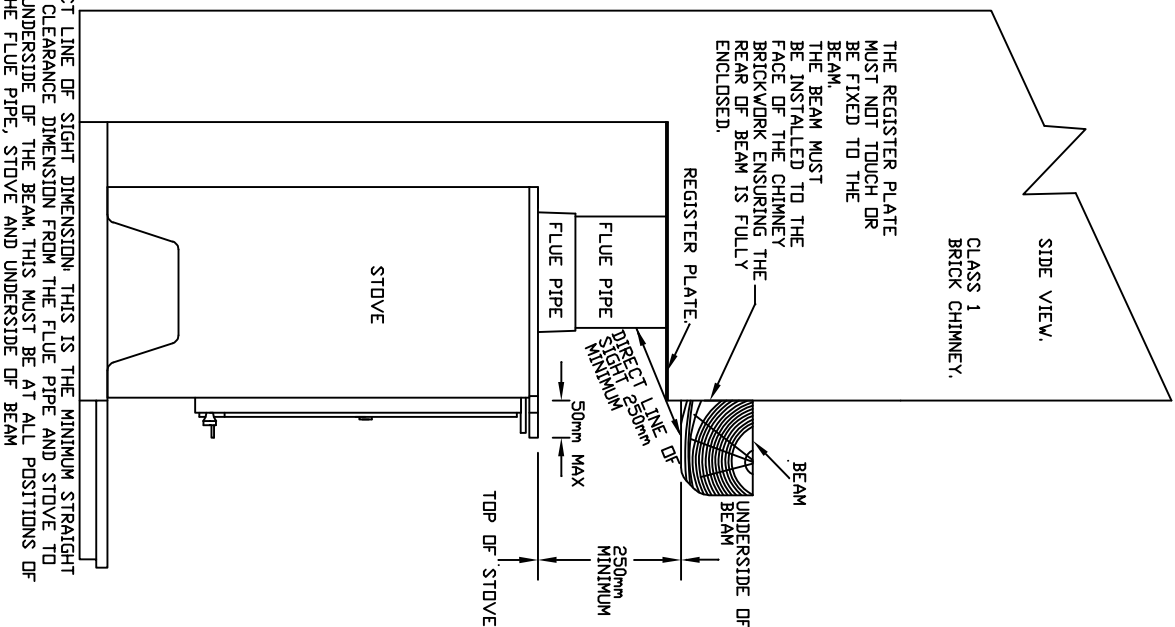

CLEARANCES WHEN THE STOVE IS PLACED MORE THAN 50mm UNDER THE BEAM.

IMPORTANT!

THE DIMENSIONS SHOWN APPLY TO CLOSED MULTI FUEL, WOOD BURNING STOVES AND GAS STOVES WITH AN APPROVED NOMINAL HEAT OUTPUT NOT ABOVE 5kW AND OPERATED AS STATED IN THE STOVE MANUFACTURER'S INSTRUCTIONS. FOR EVERY 1kW ABOVE AN APPROVED NOMINAL HEAT OUTPUT OF 5kW ADD 50mm EXTRA TO THE DIMENSIONS SHOWN. EXAMPLE: IF THE STOVE HAS A NOMINAL HEAT OUTPUT OF 7kW YOU REQUIRE TO ADD 100mm TO THE DIMENSIONS SHOWN. ALWAYS REFER TO THE STOVE MANUFACTURER'S INSTRUCTIONS TO CHECK IF THE CLEARANCES REQUIRE TO BE LARGER THAN SHOWN, IF SO THESE MUST BE RESPECTED.

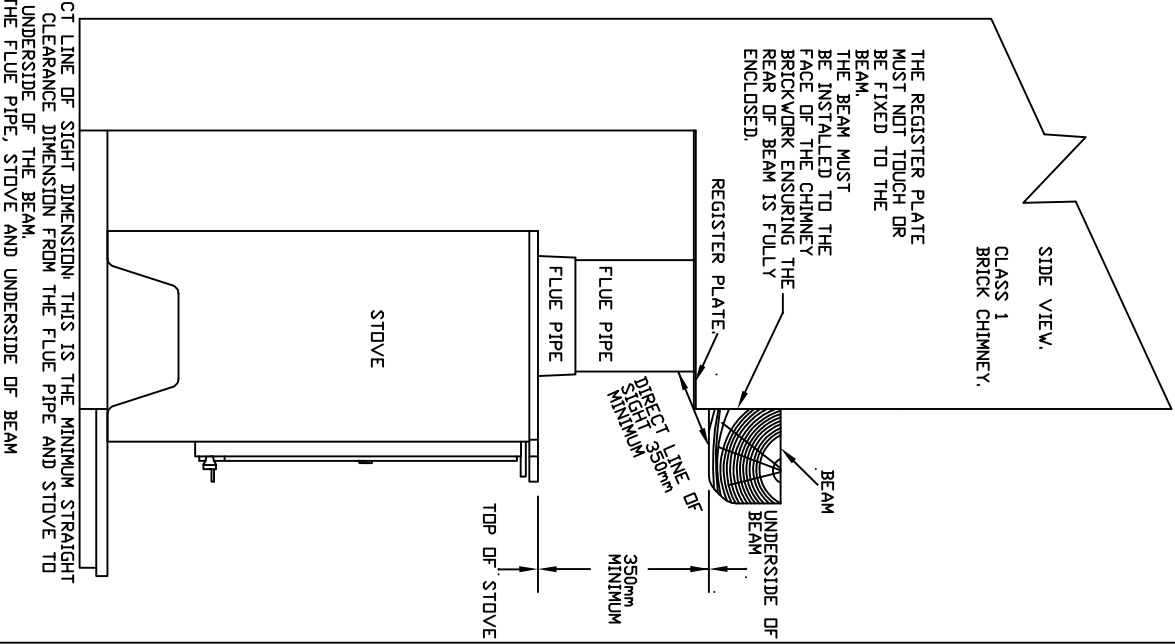

STOVE MINIMUM CLEARANCES FROM THE EXTREMITIES OF EACH SIDE AND REAR OF THE STOVE TO CHAMBER PANELS AND EACH LEG: CLOSED BURNING STOVES WITH A NOMINAL HEAT OUTPUT NOT ABOVE 5kW AND OPERATED AS STATED IN THE STOVE MANUFACTURER'S INSTRUCTIONS: 150MM.

STOVES WITH A NOMINAL HEAT OUTPUT ABOVE 5kW: FOR EVERY 1kW ABOVE A NOMINAL HEAT OUTPUT OF 5kW AN ADDITIONAL 20MM CLEARANCE FROM EACH SIDE OF THE STOVE TO THE CHAMBER PANELS AND EACH LEG IS REQUIRED.

THE CLEARANCE FROM THE REAR OF THE STOVE ONLY TO THE REAR CHAMBER PANELS ONLY CAN BE REDUCED TO 51MM PROVIDING THE BRICK CLASS 1 CHIMNEY IS CONSTRUCTED OF BRICKWORK WITH A 200MM MINIMUM THICKNESS. REFER TO BUILDING REGULATIONS AND ANY RULES IN FORCE. THIS DOES NOT APPLY TO THE STOVE TO SIDE CHAMBER AND LEG CLEARANCES, THESE

MUST HAVE A MINIMUM CLEARANCE OF 150MM WHEN USING AN APPROVED STOVE WITH A NOMINAL HEAT OUTPUT NOT ABOVE 5kW.

EXAMPLE: IF THE STOVE HAS AN APPROVED NOMINAL HEAT OUTPUT OF 7kW AND THE CHIMNEY IS CONSTRUCTED OF BRICKWORK OF A MINIMUM THICKNESS OF 200MM, THE SIDE CLEARANCES WOULD BE INCREASED TO 190MM AND THE REAR CLEARANCE WOULD BE INCREASED TO 91MM.

ALWAYS CONSULT THE STOVE MANUFACTURER'S INSTRUCTIONS TO CHECK IF THE CLEARANCES REQUIRE TO BE GREATER THAN SHOWN AS THESE MUST BE RESPECTED.

ALWAYS CHECK CURRENT BUILDING REGULATIONS AND ANY RULES IN FORCE FOR THE CHIMNEY AND FIREPLACE REQUIREMENTS WHEN WHEN FITTING AN APPLIANCE.

